 


WI-CES506GF | WI-CES509GF

## 1. Packing Content

- WI-CES506GF, WI-CES509GF



Switch x 1



Power Adapter x 1



Magnetic Accessory x 4




Quick Installation Guide x 1


## 2. Hardware Overview

- For WI-CES506GF

- Front Panel

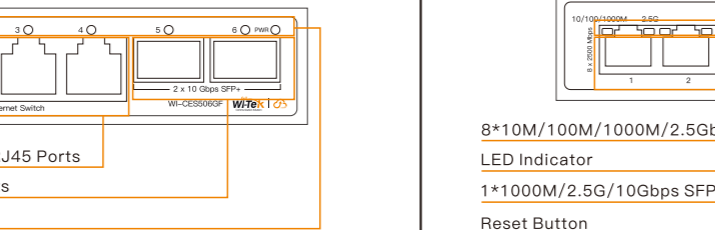

- Back Panel

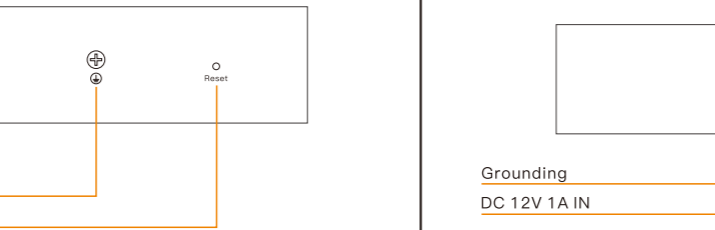


- LED Indicator and Button


LED Indicator&Button	Description
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
Port 1~4	Green on: Port is connected at 2.5Gbps rate Orange on: Port is connected at 10/100/1000Mbps rate Blinking: Data transmission Off: Port disconnected
Port 5~6	Green on: Port is connected at 10Gbps rate Orange on: Port is connected at 1G/2.5Gbps rate Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

- For WI-CES509GF

- Front Panel

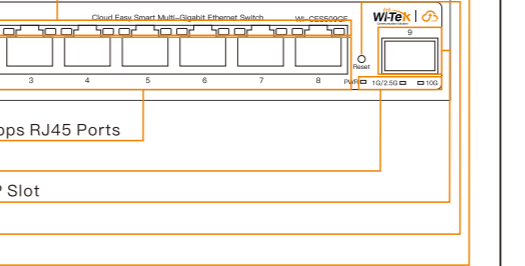

- Back Panel

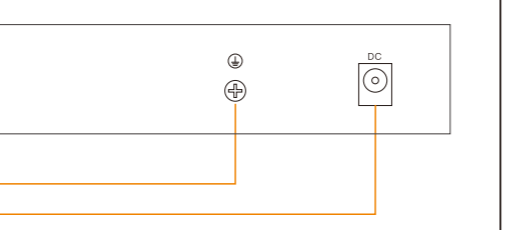


- LED Indicator and Button

LED Indicator&Button	Description
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
Port 1~8	Green on: Port is connected at 2.5Gbps rate Orange on: Port is connected at 10/100/1000Mbps rate Blinking: Data transmission Off: Port disconnected
SFP Indicator(Port 9)	1Gbps/2.5Gbps On: Port is connected at 1G/2.5Gbps rate Off: Port disconnected or the port is not connected at 1Gbps/2.5Gbps
Reset	On: Port is connected at 10Gbps rate Off: Port disconnected or the port is not connected at 10Gbps Hold for >5 sec. to restore factory default


## 3. Installation

- 3.1 Desktop Installation

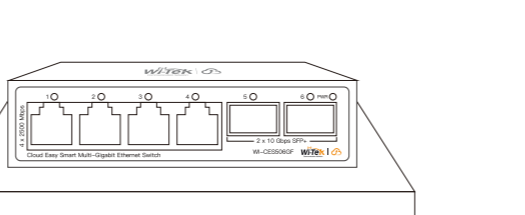


- 3.2 Wall-mount Installation

Install the Switch by following the steps: Fix 2 screws on the wall to align the 2 fixing holes on the Switch, as shown in the figure below, and hang the Switch smoothly on the screws.

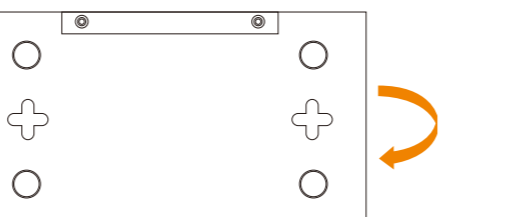

- 3.3 Magnetic-mount Installation

The switch can be installed in magnetic mode, and devices can be attached to iron desks or walls.

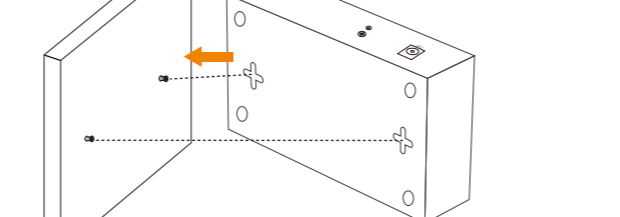

Step1. Use a marker to mark the location of mounting holes on the wall. The two mounting holes should be in the same horizontal line. The spacing between the screws matching the spacing between the two fixing holes of the switch.

Step2. Attach the switch installed with magnetic absorption accessories to a suitable installation position.

Step3. Fasten the switch to the screws through the two installation holes at the bottom of the switch. Place the switch ports side down, and the two sides of the switch are perpendicular to the ground.

Step2. Fix 2 screws on the wall. Leave the screws at least 1.5mm outside the wall to ensure that the switch can be firmly hung on the screws.

Step 1. Insert the countersunk screw through the center round hole of the permanent magnet using a Phillips screwdriver and secure it to the blind hole nut at the bottom of the switch.

Please enter the device serial number and the last six hexes of the device MAC address to bind a device to the current group, device can be off when binding.  
(Explain: The 17-digit SN code and MAC address of the switch are shown on the sticker on the back of the switch as shown in the figure below)

Log in to the cloud management page  
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

Cloud login switch configuration

1. Log in to the cloud management page  
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)

2. Enter the cloud binding switch  
(Explain: The switch must be connected to the internet to bind successfully)

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then use EWEB to enter the switch.  
(The EWEB tunnel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)

If the product defects within the warranty period, we will provide professional maintenance service.  
• Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.  
• Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

Wireless-Tek Technology Limited  
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.  
Website: [www.wireless-tek.com](http://www.wireless-tek.com)  
Tel: 86-0755-32811290  
Email: [sales@wireless-tek.com](mailto:sales@wireless-tek.com)  
Technical Support: [tech@wireless-tek.com](mailto:tech@wireless-tek.com)

CE FC RoHS UK CA

Warranty Card

Username  
Address  
Telephone No.  
Purchase Shop  
Purchase Address  
Product Model No.  
Purchase Time  
Serial No.  
Dealer Signature

Technical Support  
Company Website  
Cloud Management